


# STRAINER CLAMPS

## SPECIFICATION SHEET

Straining a prefabricated wire netting fence is made easier using the McVeigh Parker clamp bars. Using clamps enable you to get an even tension throughout the whole net. The tubular lug clamp bar, clamps the wire safely between the main body and bar, with minimum wire distortion.

Easy to assemble, no nuts, bolts or spanners required. Simply lay the netting on the ground, place the tubular lugged bar under the net, in line with the tension curves for the best results. Align the main body to engage the lugs so it clamps the netting between both components. Make sure the dee shackles are on the clamp side you wish to strain. Check the clamp is in line with each end of your netting. Then apply the wedges, tap them firmly into the lugs. Now hook your chain strainers into your dee shackle points top and bottom to give an even strain, for taller nets we recommend using three hook chain strainers, hooking onto the top, middle and bottom shackle points.

For best results you will need two hook wire strainers (**A2210**) MP model, or similar hooked tensioning tool.

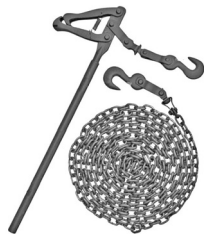

### Specifications

- Frame is manufactured from 5mm flat high tensile steel
- 32mm dia x 4mm thick seamless tube clamp bar
- High tensile strength 370-500 N/mm<sup>2</sup>
- Dee shackle straining point
- Wedges 190mm x 40mm x 12.5mm

- Hammer in wedges for quick and easy erection
- Universal skid ends prevent clamp snagging on the ground
- Bright orange finish, making it easily visible in the field
- Connected wedges, less chance of losing them

### Stock fence boundary clamp Code: A2220

- Length: 1.0m
- Suits net up to 0.98m
- Weight: 16.5kg
- 3 wedges

### Horse boundary clamp Code: A2225

- Length: 1.3m
- Suits net up to 1.28m
- Weight: 20.6kg
- 4 wedges

### Deer boundary clamp Code: A2230

- Length: 2.0m
- Suits wire up to 1.98m
- Weight: 29.8kg
- 5 wedges

